



Once the flight has been configured, make sure that the remote is in "F" mode and then tap the play button on the left side of the screen (boxed in red here). At any point, if you need to call the drone back home, do a long press of the return to home button on your remote.